






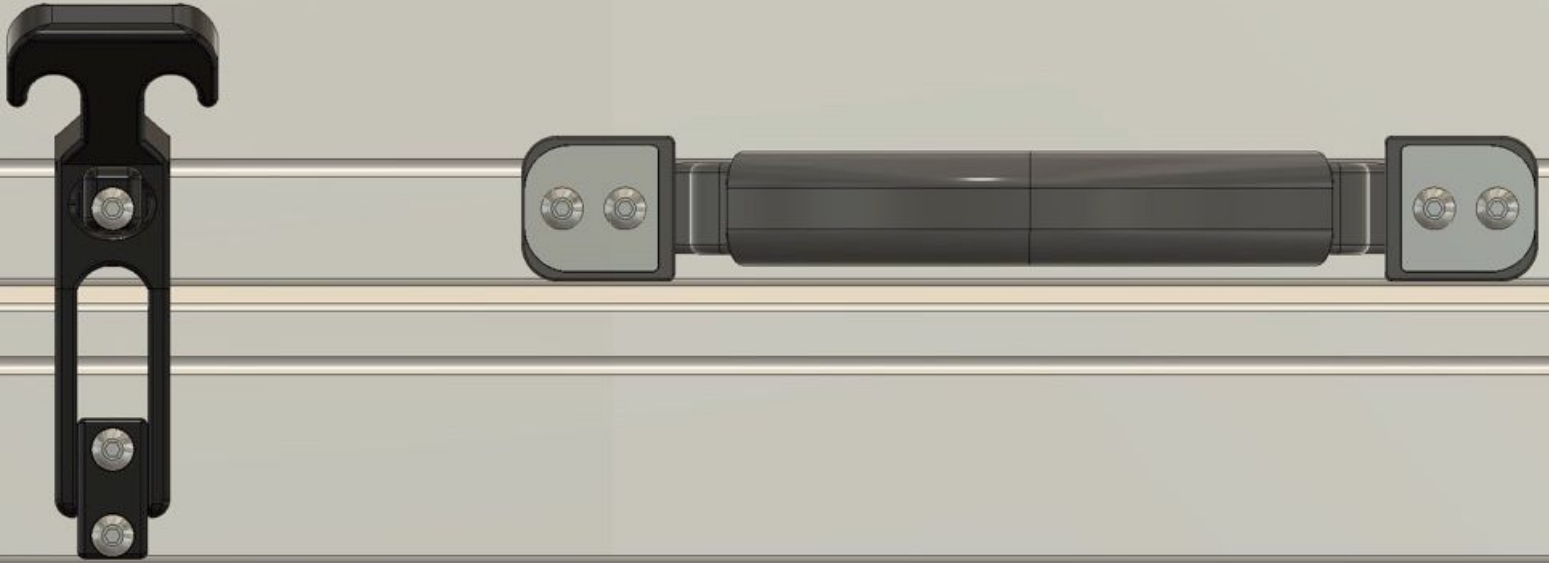


STEP RAMP™

HANDLE AND LATCH INSTALLATION INSTRUCTIONS



PARTS LIST

Quantity	Diagram	Description
1		Handle
2		Handle Plate
4		M5x16 Screw
3		M5x24 Screw
1		T-Latch
1		T-Latch Hook
1		3mm Allen Key

DO NOT OVER-TIGHTEN HARDWARE

1. Reference diagram above for proper layout and configuration.
2. Align **Handle Plate** with holes on base of **Handle**, fasten to ramp with **M5x16 Screws**.
3. Fasten **T-Latch** with (2) **M5x24 Screws**.
4. Fasten **T-Latch Hook** with (1) M5x24 Screws, ensuring that the support peg is inserted into the non-threaded hole.

VISIT STEPRAMP.COM/ASSEMBLY.PHP OR SCAN THE CODE BELOW FOR A STEP-BY-STEP VIDEO!

